


# Assembly Instructions for New Steam Head



1. Remove old steam head by cutting hose below the handle.
2. Turn steamer on and allow steam to heat and soften hose. Once hose is flexible, **TURN THE STEAMER OFF**. Slide the pliable hose over the new head until the end of the hose fits tightly against the retainer ring.

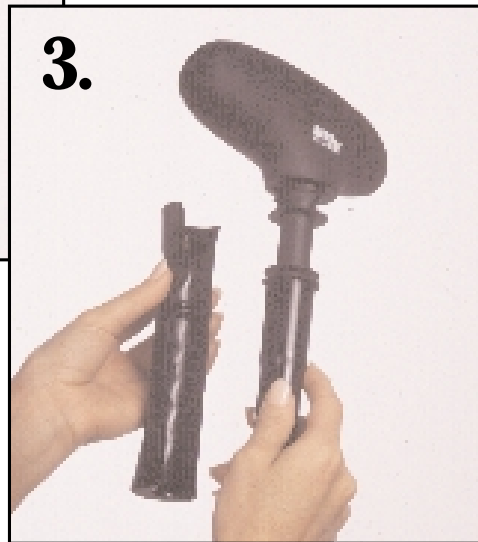

3. The bottom half of the handle has molded finger grip impressions. Align the grooves in this bottom handle half with the three rings on the head.



4. Align the grooves in the top handle half with the three rings on the head. As the two halves are aligned in the grooves, four snaps on each side of the handle will align as well.

- 5 a. and b. Once all grooves, rings and snaps are aligned, clamp together firmly.



Comments? Questions?  
Jiffy Steamer Company Hotline  
1-800-J2-Jiffy  
(1-800-525-4339)



Worldwide Leader in Steaming Equipment Since 1940

Jiffy Steamer Company, LLC  
P.O. Box 869 (38281)  
4462 Ken-Tenn Highway  
Union City, TN 38261  
Phone: (731) 885-6690  
Fax: (731) 885-6692  
Toll-Free: 1-800-525-4339