


Jiffy® Steamer Model J-2000® Wiring Instructions



Worldwide Leader in Steaming Equipment Since 1940

Insure that the power cord is unplugged from the electrical outlet before attempting to repair your Jiffy® Steamer. Please note Switch Terminal Numbers 2, 3, 5 and 6, indicated on the enlarged switch diagram below, are marked on the actual switch.

- 1) Insert cordset into housing and connect white neutral wire from cordset bundle to Switch Terminal Number 5 on the switch.
- 2) Connect blue wire from the right side of heating element to the right side of the L-290 thermostat.
- 3) Insert brass heating unit into housing and tighten with 2 mounting screws. Connect green ground wire (from cordset) to the nearer of the two black mounting stands.
- 4) Connect black positive wire from cordset to plastic connector on orange fusible link wire.
- 5) Connect other end of orange fusible link to Switch Terminal Number 2 on the switch.
- 6) Connect yellow wire from the left side of the thermostat to Switch Terminal Number 3 on the switch.
- 7) Connect white wire from the left side of the heater unit to Switch Terminal Number 6 on switch.
- 8) Insert one end of copper water line and compression ring into threaded fitting at bottom of brass heating unit and tighten nut with a 5/8" wrench.
- 9) Connect other end of water line with compression ring to 90 degree brass elbow at bottom of water cup and tighten with a 5/8" wrench. (Heating unit may be loosened and adjusted for a better fit if necessary.)
- 10) Set steamer upright and place black plastic strain relief approximately 4½" from end of cord and insert into housing using pliers.
- 11) Re-attach bottom plate.
- 12) To avoid leakage, be sure and tighten hose (or hat nozzle) with wrench before using steamer.

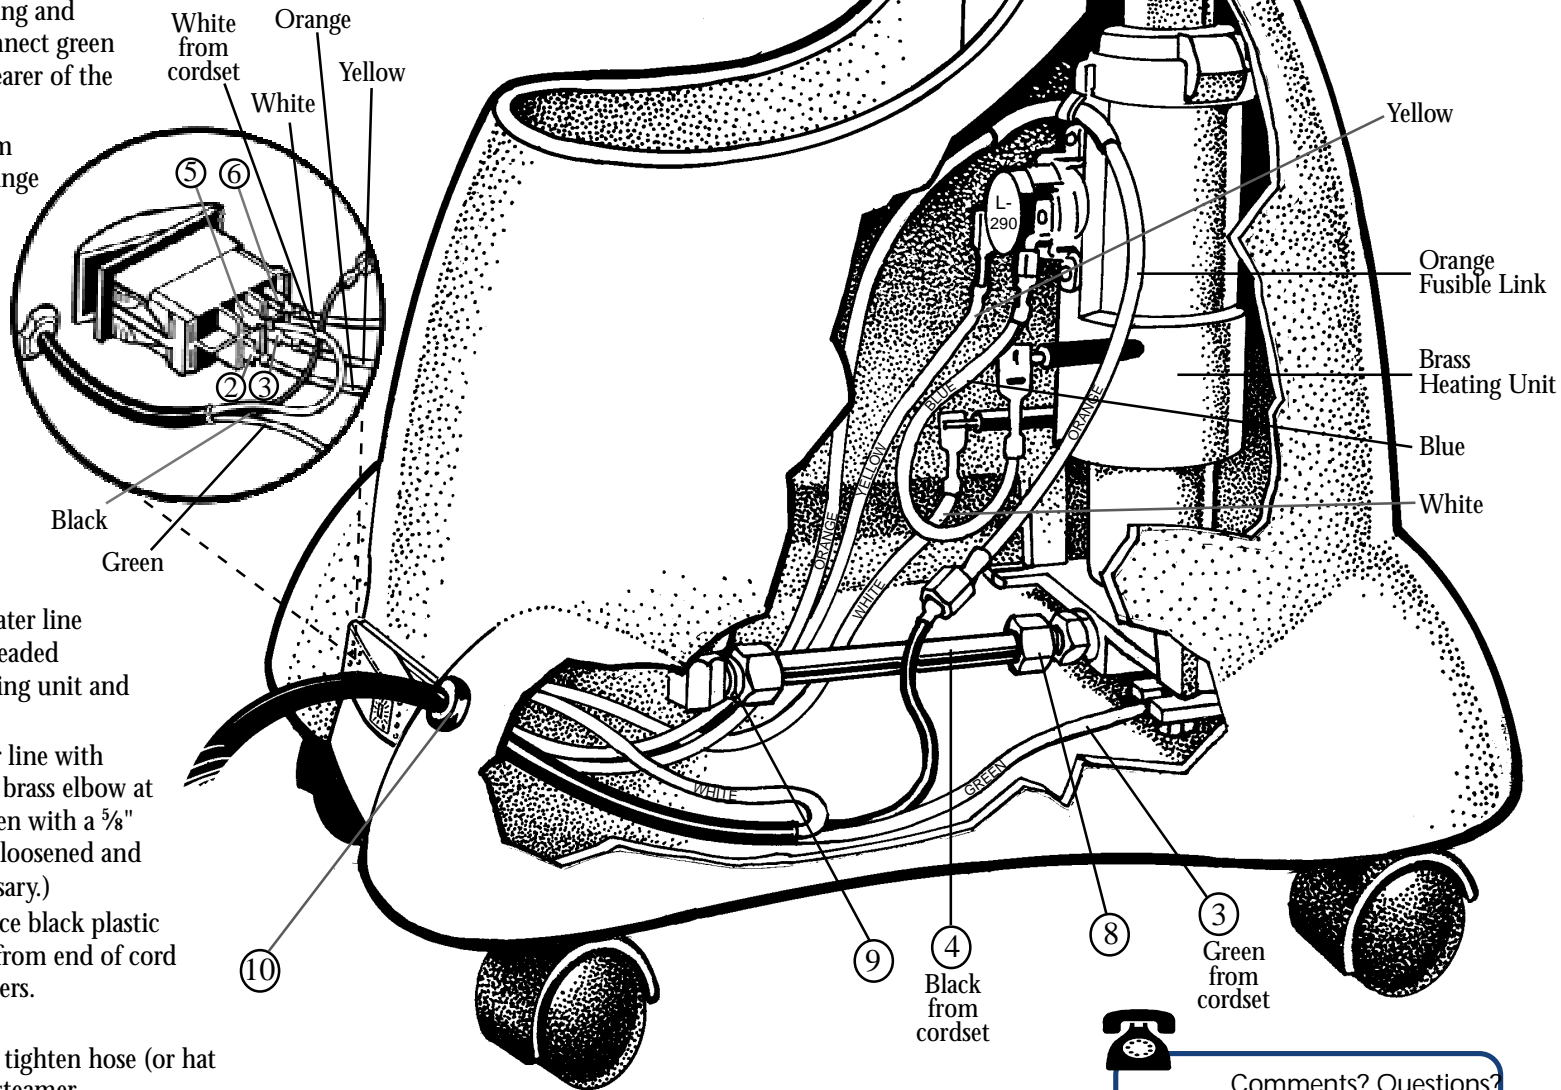

Comments? Questions?
Jiffy® Steamer Company Hotline
1-800-J2-Jiffy
(1-800-525-4339)

Jiffy Steamer Company, LLC

4462 Ken-Tenn Highway (38261) Post Office Box 869 Union City, Tennessee 38281-0869 United States of America
Phone: 1-901-885-6690 Fax: 1-901-885-6692 Web: www.jiffysteamer.com E-mail: jsinfo@jiffysteamer.com